1

Miniature Circuit Breaker



Installation Instructions

Notice d'installation

Instrucciones de montaje

Noark

B1E




WARNING


2

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED.DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISSINSTALLATION OF IT'S PRODUCTS.


B1E

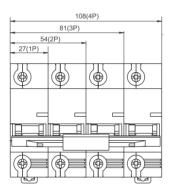


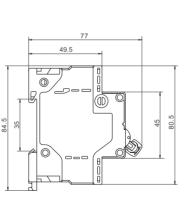


1P/2P/3P/4P

B1E

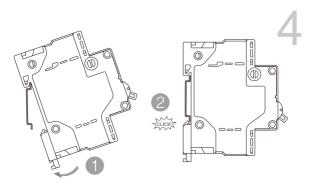


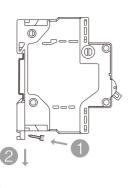

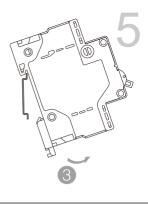


B1E


	⊕ ⊖ Z2
Wire 1 and 2	6-0 AWG (16-50 mm²)
(—=	32lbs. in(3.5Nm)

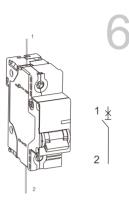

B1E

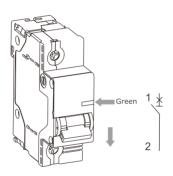

B1E

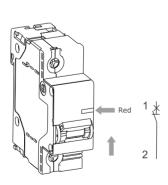

Noark



Printed with environment-friendly paper

Copyright Noark. All Rights Reserved www.noark-electric.com

07/2014

8