


电动操作机构 Motor Mechanism



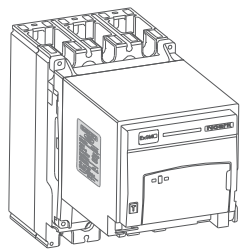


未按本说明书要求操作造成的不良后果，制造商将不承担责任。





The manufacturer assumes no responsibility for unfavourable consequence resulting from the non-application or incorrect application of the instructions provided herein.

NOARK 诺雅克


A 安装 Installation

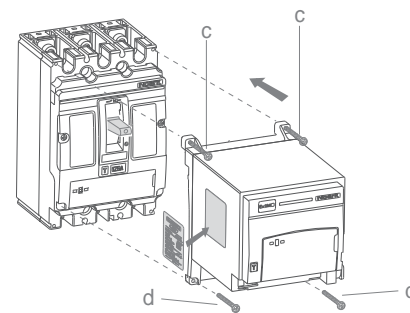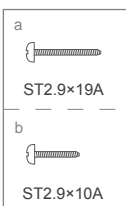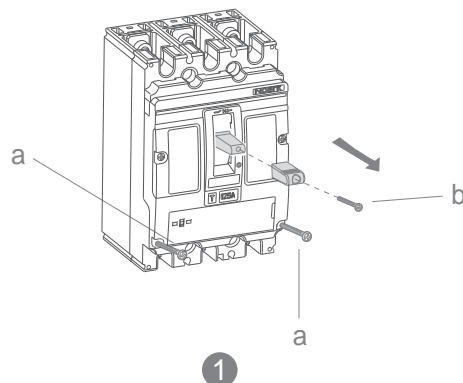

 铭牌在主体包装箱内，需自行粘贴。
The nameplate has been given together with Ex9M, you have to paste it by yourself.

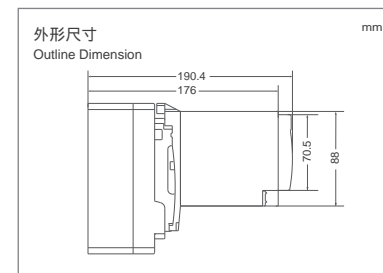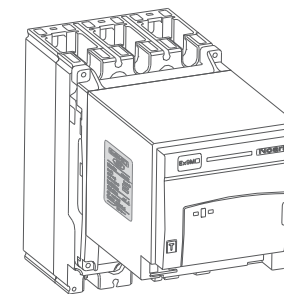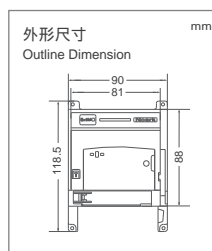

B 操作方式 Operating Mode


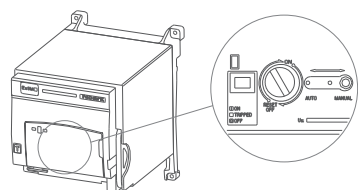


电动操作位
Motor - Operating





手动操作位
Hand - Operating


C 电动操作 Motor-Operating

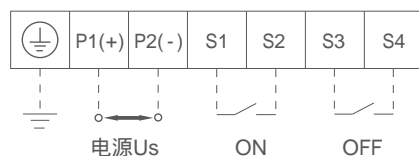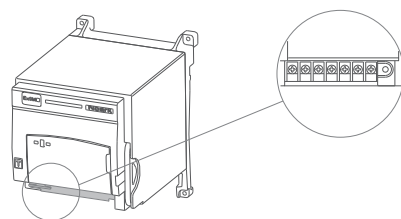

D 手动操作 Hand-Operating

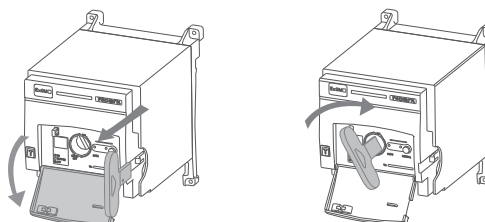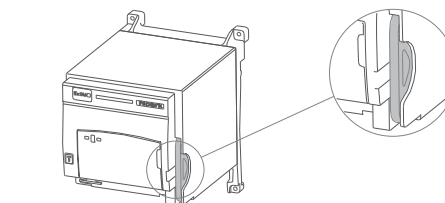

E 操作指示 Operating Instruction

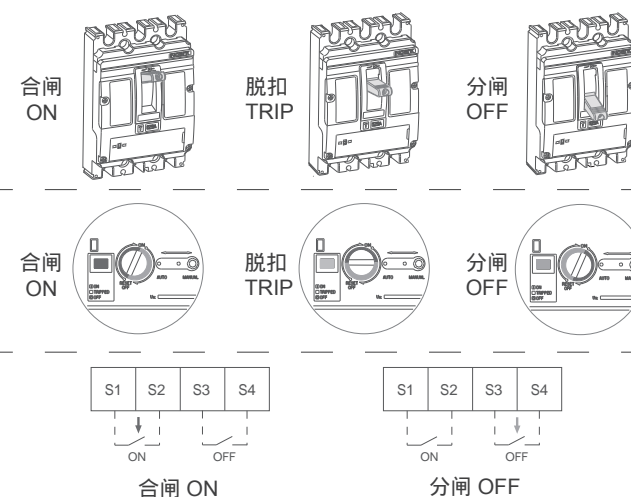

上海诺雅克电气有限公司
NOARK Electrics (Shanghai) Co., Ltd.
地址：上海市松江工业区松开V-7A-1号地块
Add: Block V-7A-1, Songjiang Industrial Zone, Shanghai
电话/Tel: 021-3779 1111
客服热线/Customer Service Hotline: 400-1092-111

采用环保纸印刷
Printed with environmentally-friendly paper
本说明书解释权归NOARK所有。
The expression right of the instructions are owned by NOARK.